


Travaux Pratiques II

Courbes expérimentales


ControlX

Influence de la consigne

Consigne = 100 mm

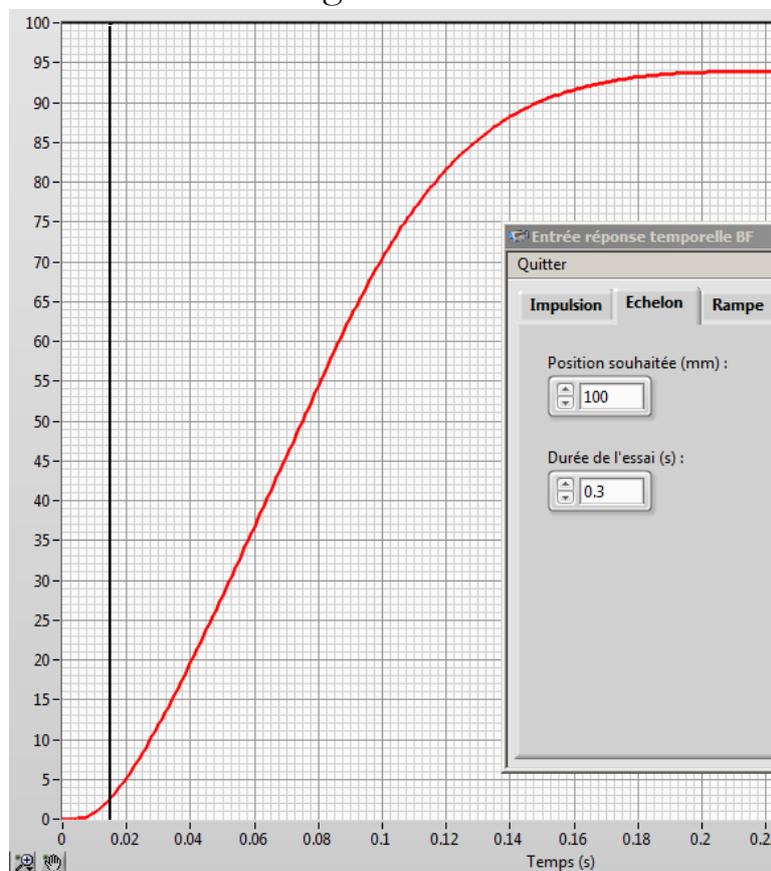


Consigne = 50 mm

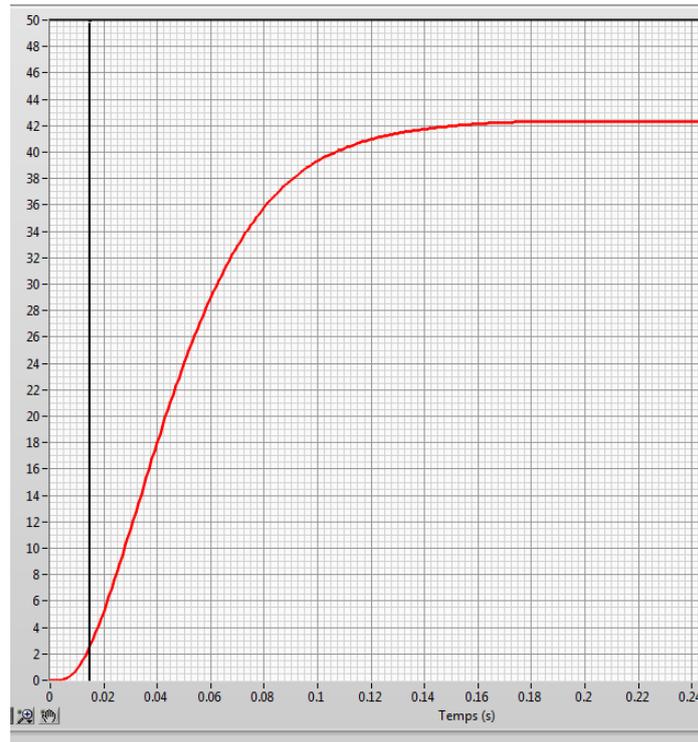


Consigne = 150 mm




Consigne = 200 mm

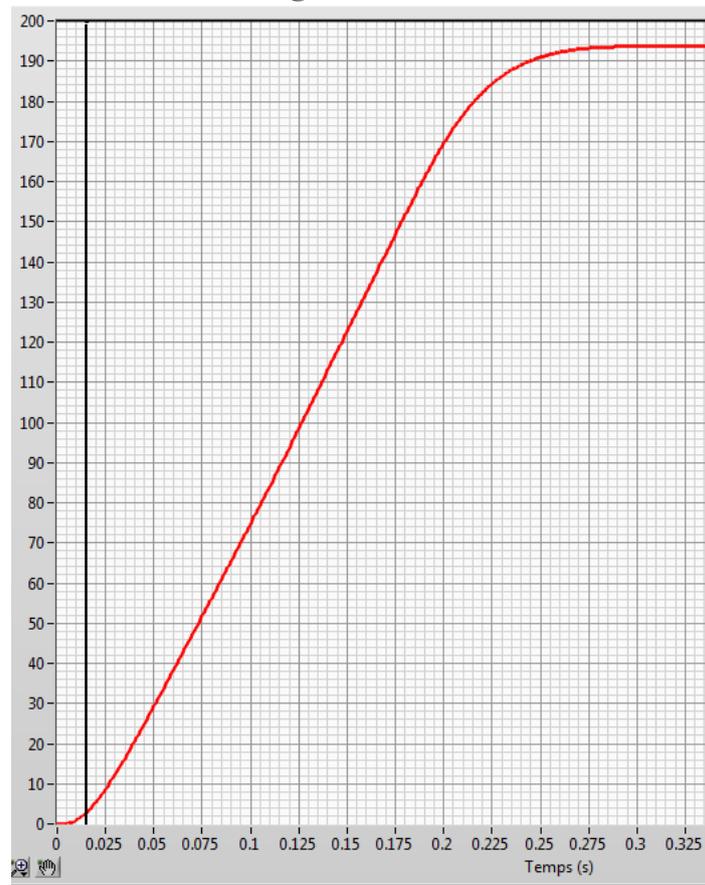


Consigne = 250 mm

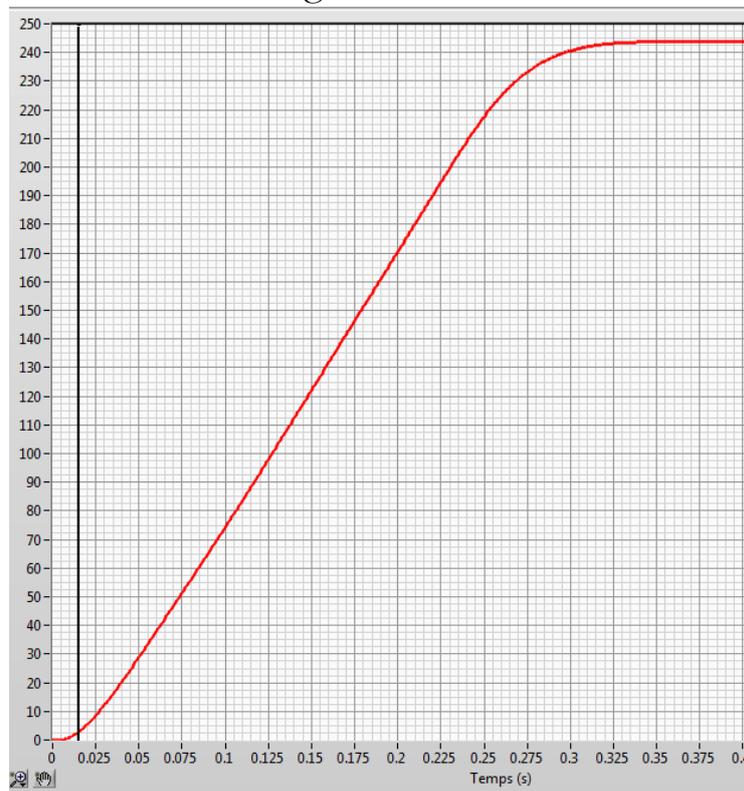

Consigne = 300 mm

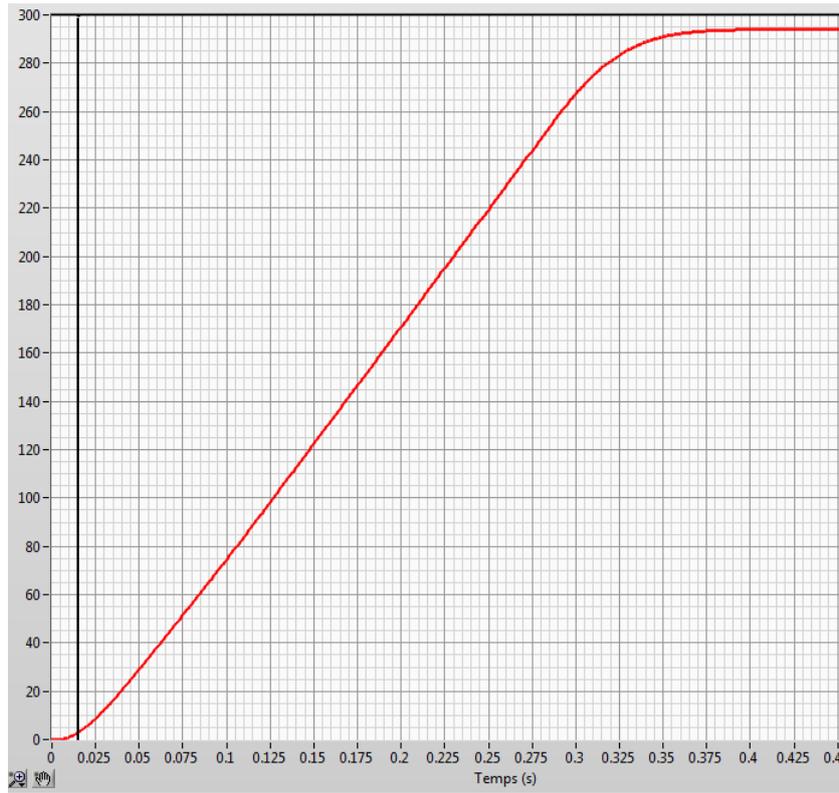


Consigne = 350 mm

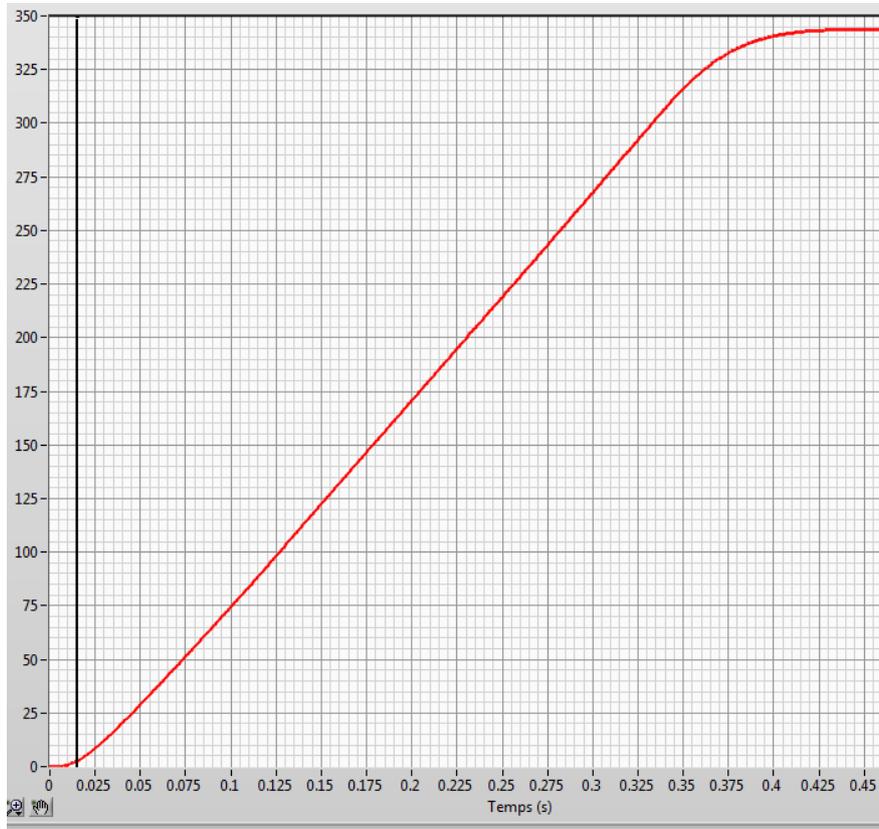

Influence du gain


Gain = 0.1

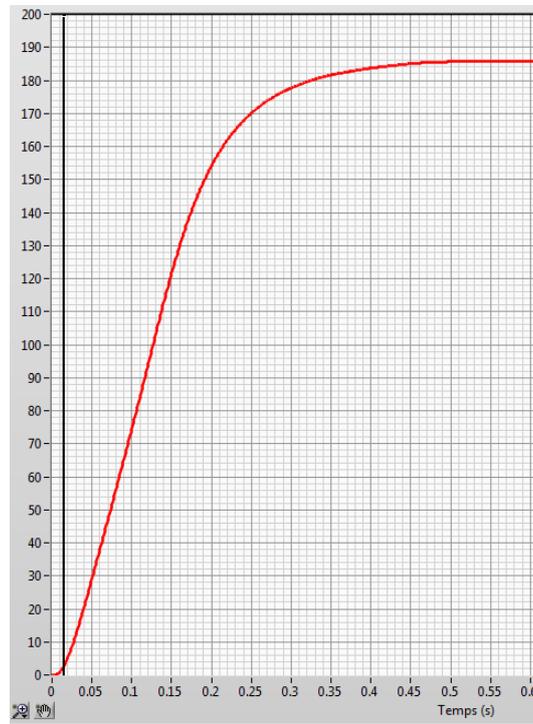


Gain = 0.15




Gain = 0.25

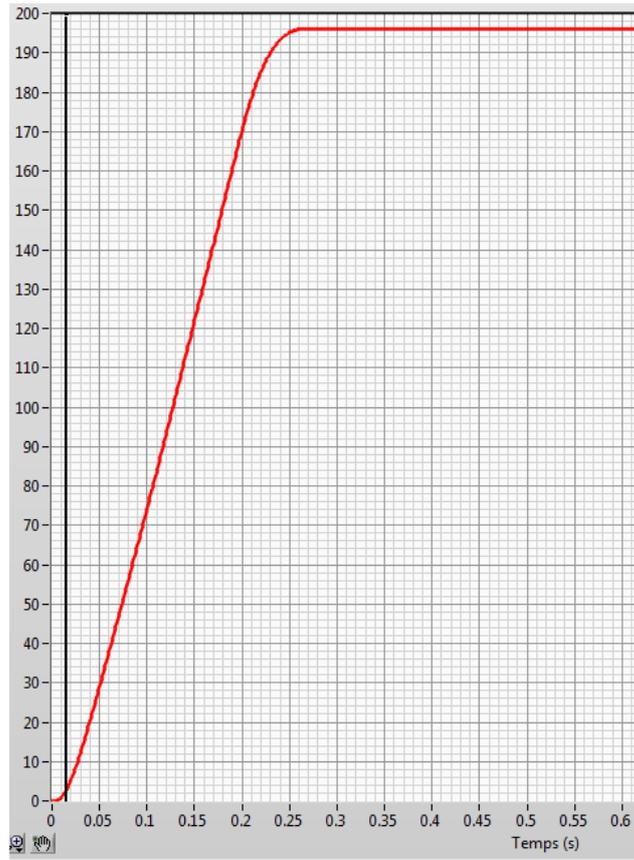


Gain = 0.3

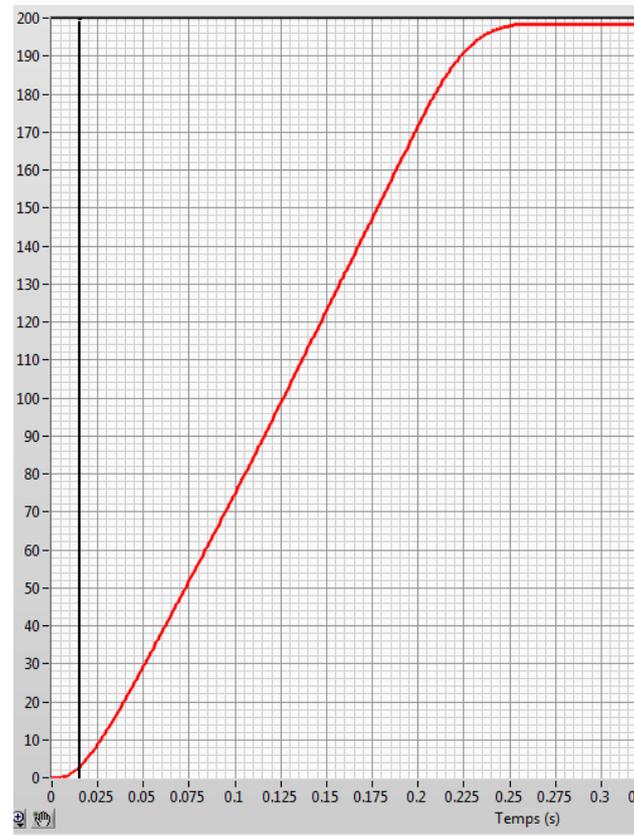


Gain = 0.4

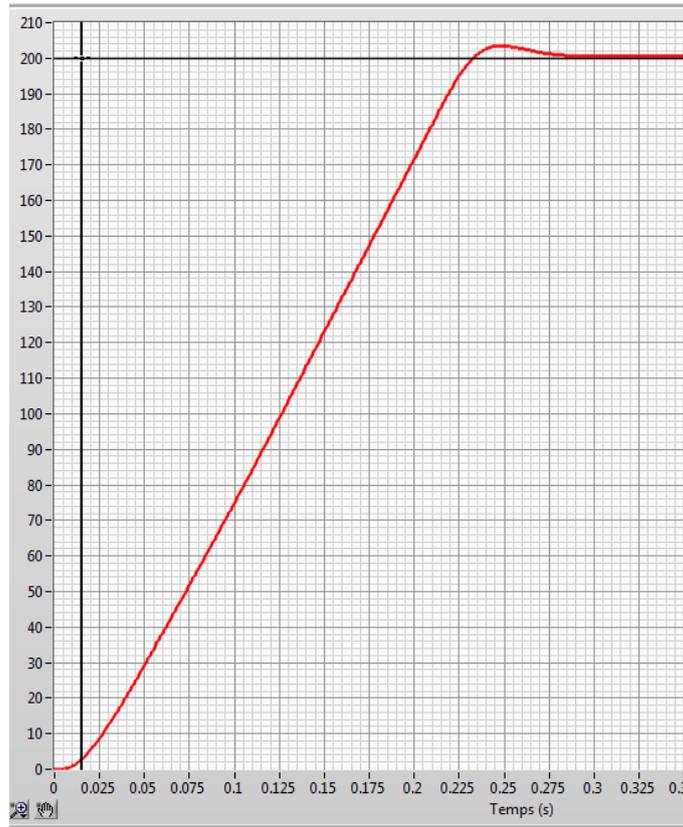


Gain = 0.5

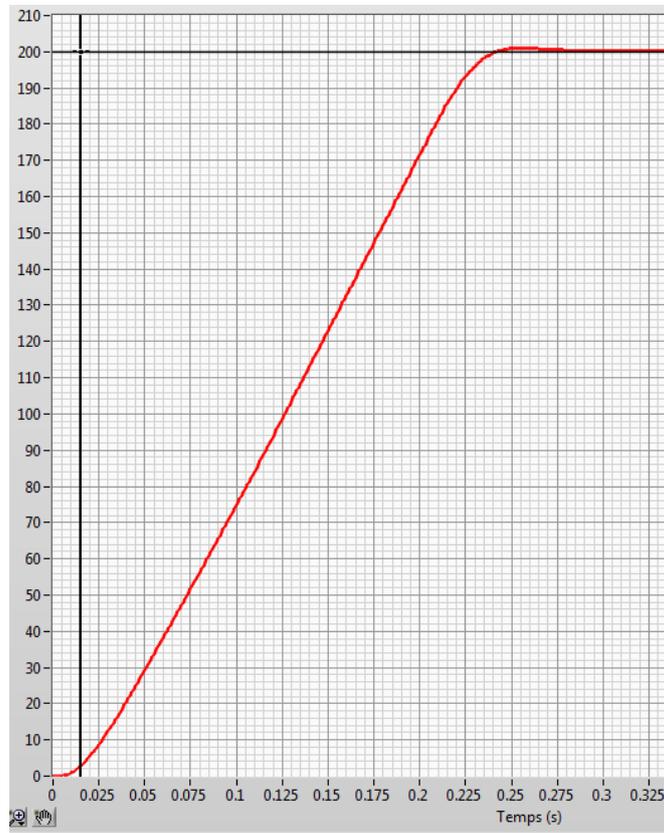


Gain = 0.6

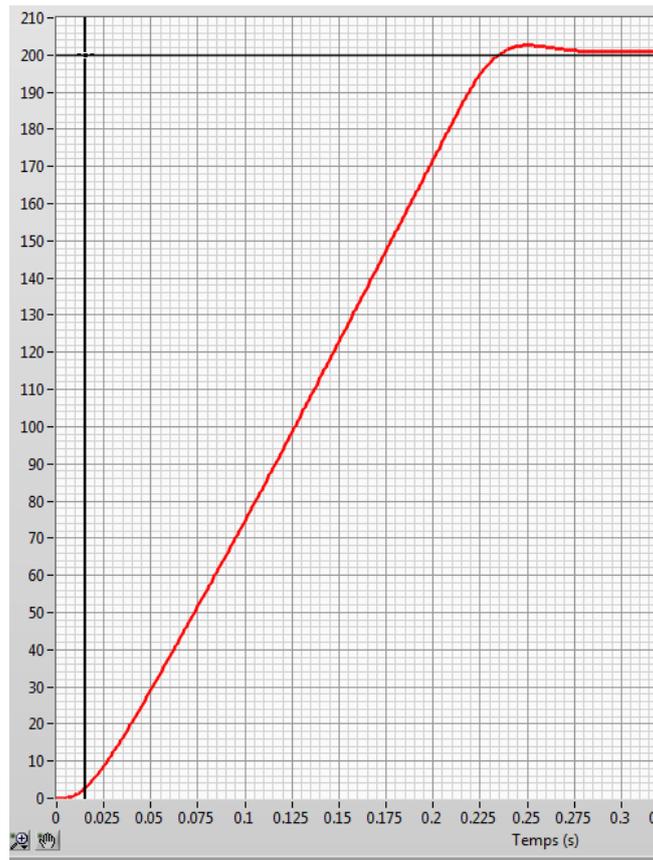


Gain = 0.7

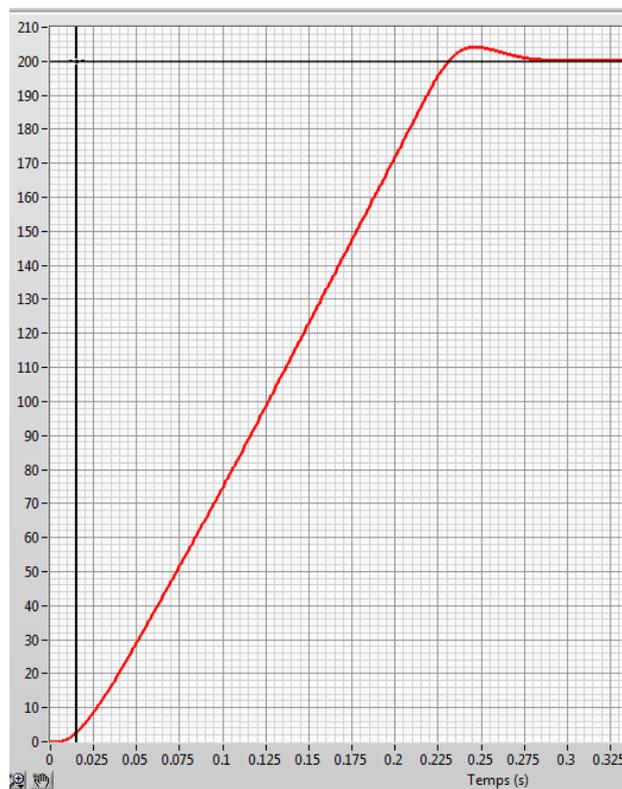


Gain = 0.85

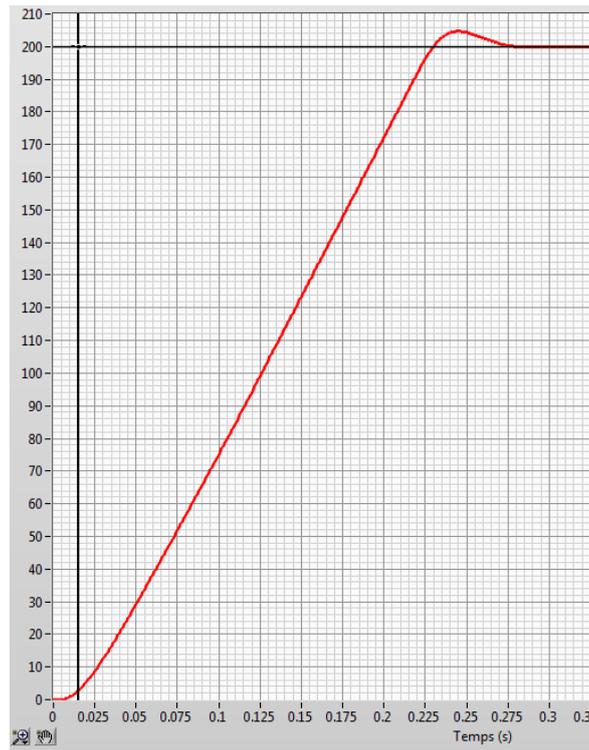


Gain = 1

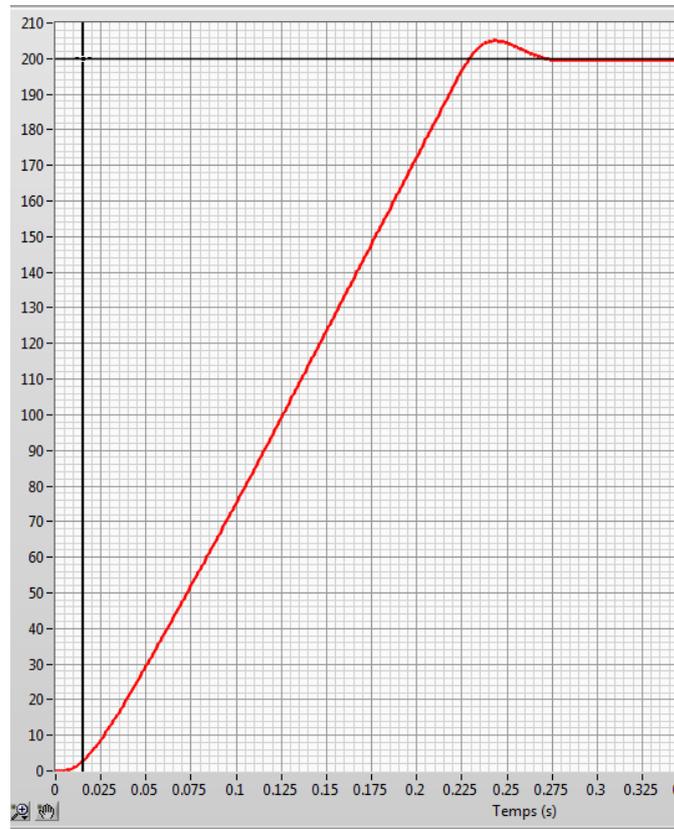


Gain = 1.5

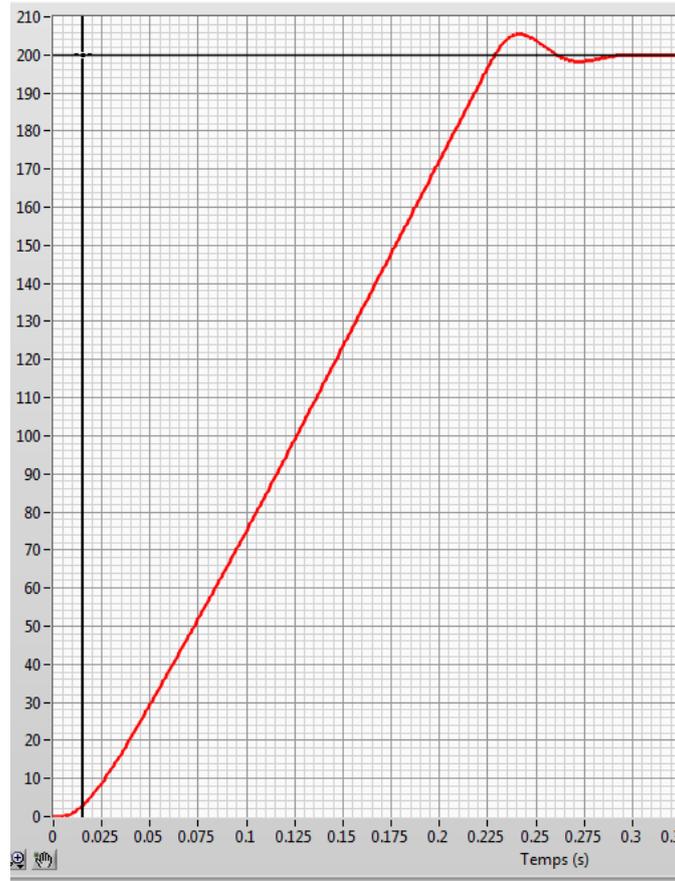

Gain = 3

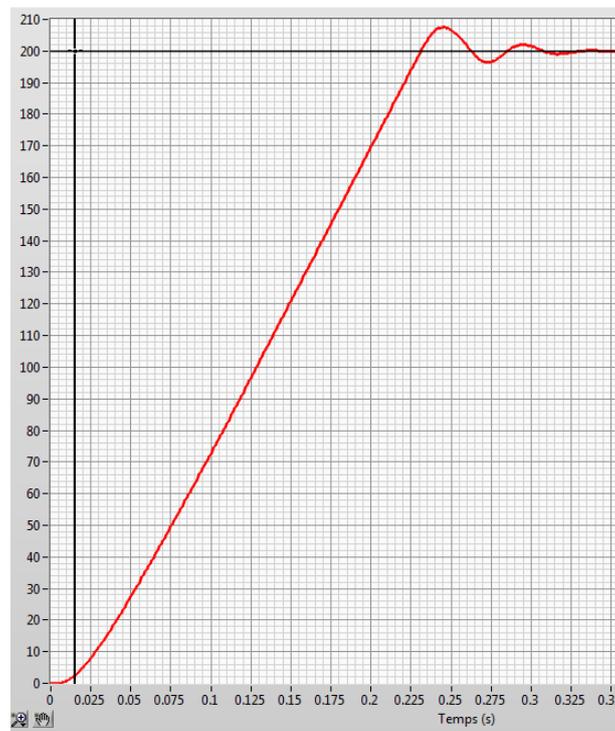

Gain = 5

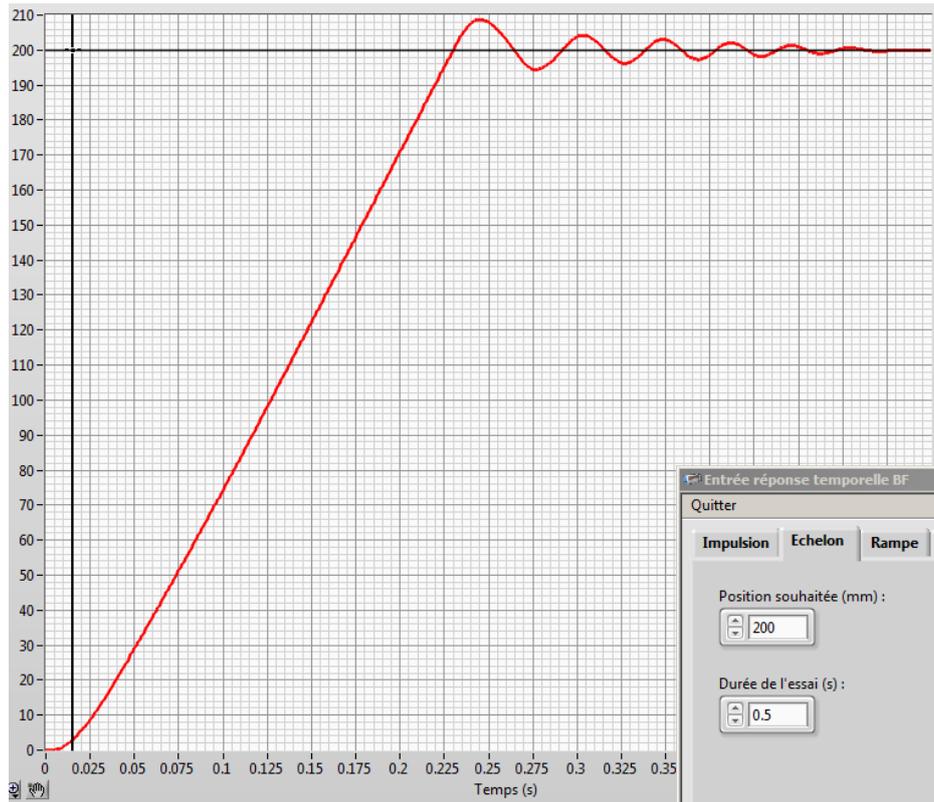

Gain = 6

